

POCKEY 3IN1 GAME TABLE

 


Replacement Parts

Order direct at www.gldproducts.com
or call our Customer Service department at
(800) 225-7593 X113
8 am to 5 pm Central Standard Time

Staple your receipt here.

Important: A copy of your receipt will be needed to activate your warranty (see page 13).



Congratulations and THANK YOU for purchasing the Pockey 3 in 1 Game Table. You have chosen a product that should provide years of entertainment. To assist you with customer service and warranty claims, staple your receipt to the inside cover, then keep this manual in a safe place for future reference.

GLD Products

S84 W19093 Enterprise Drive
Muskego, WI 53150 USA
1-800-225-7593
Fax: 1-800-841-6944
Email: gld@gldmfg.com
Web: www.gldproducts.com



Place your package near the location where it will be used. Carefully unpack all components and verify you have all the correct pieces.

If you notice missing or defective parts, please call us at:

1-800-225-7593 X113



Please read and understand all instructions before beginning assembly.

This assembly will require 2 adults.

This product is not for use by children without adult supervision.

IF YOU HAVE A WARRANTY CLAIM, CALL US FIRST

Please see page 13.

GLD Products

Available 8 am to 5 pm Central Standard Time

S84 W19093 Enterprise Drive
Muskego, WI 53150 USA
1-800-225-7593
Fax: 1-800-841-6944
Email: gld@gldmfg.com
Web: www.gldproducts.com

For all claims, please have your receipt and item number when you call. The product item number can be found on the front cover.

If you are instructed to return the product for service, you are responsible for shipping the unit at your expense.

PRODUCT REGISTRATION

Important: The product registration form on page 14 and a copy of your receipt must be completed and returned within 10 days of purchase to validate your warranty.

Preparing for Assembly

- Be sure to unpack all of the parts included in this package. Some parts are stored inside the table top, see “Unpack the Pieces”. Check inside any tubes or sleeves. Save all packing material until the product is fully assembled and functional.
- Compare the parts in your package with the Parts Identifier description on pages 5 and 6.
- If any parts are missing, check inside the fan compartment.
- After unpacking large products, some disassembly may be required prior to beginning the assembly.

Tools Required

- Allen wrench (#32) - included with table
- Open end wrench (#21) - included with table
- Box wrench (#24) - included with table
- Phillips screwdriver (not included)
- Level (not included)
- Electric screwdriver may be helpful. **CAUTION:** You must set at LOW TORQUE and use extreme caution because you could overtighten the hardware, strip the screws, or damage the table.

Assembly Tips

Make sure you understand the following before you begin to assemble your game table.

1. READ THIS MANUAL all the way through before beginning assembly.
2. When installing parts that have more than one bolt, start ALL bolts in that part by hand before tightening anything.
3. Some drawings or images in this manual may not look exactly like your product.
4. You will need a second adult to assist with this assembly.
5. Any stickers may be removed with hot water and mild soap. Do not get the playing surface wet.

Note: Save all packing materials until the parts have been inspected and the table is assembled.

Unpack the Pieces

- Lay the box on a flat surface (floor). You may want this near your area of assembly.
- Unpack the boxes and part bags. Inspect and count the parts. The Parts Identifier page can be used to record your results.
- Some parts on the parts identifier page are pre assembled.
- If any parts are damaged or missing contact GLD customer service.
- Missing fasteners may be purchased at a hardware store using the descriptions on the Parts Identifier page(s).

 
 
 
 
 
 

 

 
 







 

 
 


Games



 
 
 

 
 
 



This game table includes the equipment and game pieces for the following games:

Air Hockey Pool Table Tennis

The rules for these games are not discussed in this manual.


Parts Identifier

Part No./ Qty	Illustration/ Order Number	Part No./ Qty	Illustration/ Order Number	Part No./ Qty	Illustration/ Order Number
1 Qty. 1	 Table Top Order No. 2-200	2 Qty. 2	 Pedestal Order No. 2-201	3 Qty. 2	 Side Rail Order No. 2-6
4 Qty. 2	 End Rail Order No. 2-8	5 Qty. 4	 Table Lock Order No. 2-9	6 Qty. 2	 Puck Catcher Order No. 2-202
7 Qty. 4	 Goalie Order No. 2-18	8 Qty. 18	 1/4" Barrel Nut Order No. 2-12	9 Qty. 4	 Felt Pad Order No. 2-19
10 Qty. 8	 Hex Head Bolt 1/4"*3" Lg. Order No. 2-14	11 Qty. 10	 Hex Head Bolt 1/4"*2" Lg. Order No. 2-13	12 Qty. 18	 1/4" Washer Order No. 2-15
13 Qty. 16	 1/2" Phillips Head Screw Order No. 2-31	14 Qty. 6	 3 Are Preassembled 3/4" Washer Order No. 2-16	15 Qty. 4	 2 Are Preassembled 3/4" Hex Nut Order No. 2-17
16 Qty. 4	 Puck Order No. 2-20	17 Qty. 1 Set	 Billiard Balls Order No. 2-21	18 Qty. 1	 Brush Order No. 2-22
19 Qty. 2	 Cue Stick Order No. 2-23	20 Qty. 2	 Chalk Order No. 2-24	21 Qty. 1	 Open End Wrench Order No. 2-25
22 Qty. 4	 Leg Leveler Order No. 2-26	23 Qty. 1	 Triangle Order No. 2-27	24 Qty. 1	 Box Wrench Order No. 1-17

<p>25</p>  <p>Qty. 2</p> <p>Cues Rack Order No. 2-204</p>	<p>26</p>  <p>Qty. 2</p> <p>Puck Holder Order No. 2-205</p>	<p>27</p>  <p>Qty. 1</p> <p>Table Tennis Net With Posts Order No. 8-10</p>
<p>28</p>  <p>Qty. 1</p> <p>Table Tennis Top Order No. 2-52</p>	<p>29</p>  <p>Qty. 8</p> <p>Allen Key Bolt 3/16" * 1" Lg. Order No. 2-203</p>	<p>30</p>  <p>Qty. 1</p> <p>Allen Key Order No. 2-116</p>
<p>31</p>  <p>Qty. 2</p> <p>Slide Scorer Order No. 2-208</p>	<p>32</p>  <p>Qty. 4</p> <p>F4*1" Screw Order No. 2-209</p>	<p>33 (PRE-Assembled)</p>  <p>Qty. 18</p> <p>W/P4*1-1/4" Screw Order No. 2-206</p>
<p>34 (PRE-Assembled)</p>  <p>Qty. 4</p> <p>Corner Order No. 2-207</p>	<p>35</p>  <p>Qty. 2</p> <p>Table Tennis Ball Order No. 8-4</p>	<p>36</p>  <p>Qty. 2</p> <p>Table Tennis Bat Order No. 8-5</p>


Assembly

 Remove all components from the carton **NOTE: Parts are packed inside the table top (#1). Remove the pool table surface, inside the table top you will find all the parts needed to assemble your table .When all the parts are out of the table top, replace the pool table surface. Reattach the pool table surface by replacing the screws(#33).**

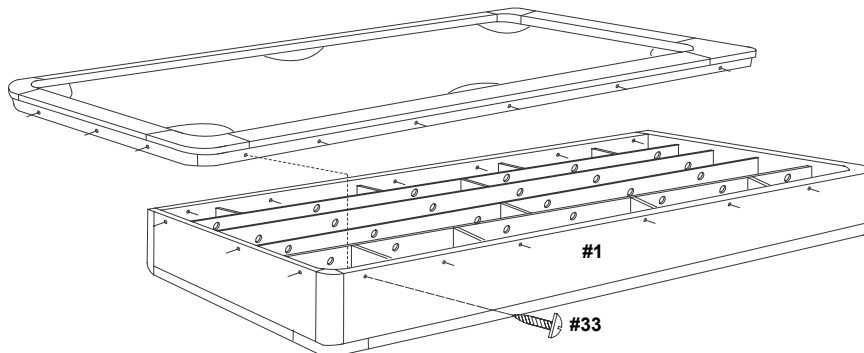


Step 1. Assemble the pedestal .

 - Carefully remove two (#2) pedestals and four levelers (#22) from the package.
- Insert levelers into pre-drilled holes in the bottom of each leg of the pedestal and secure part way.

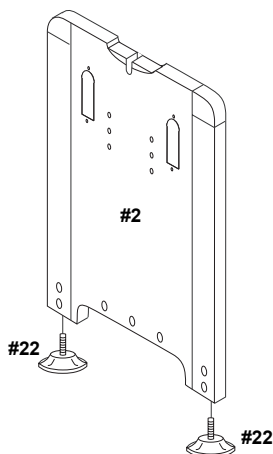

 
Step 2. Attach the table locks.

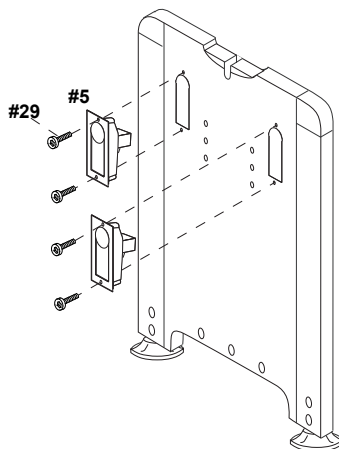

- Attach two locks (#5) to the outside of each pedestal using bolt (#29) .


STEP 3 - ASSEMBLE THE BASE

 1. With the help of another person, attach the end rails (#4) to side rails (#3) using 2" hex bolts (#11) washers (#12), and barrel nuts (#8). Hand tighten bolts.

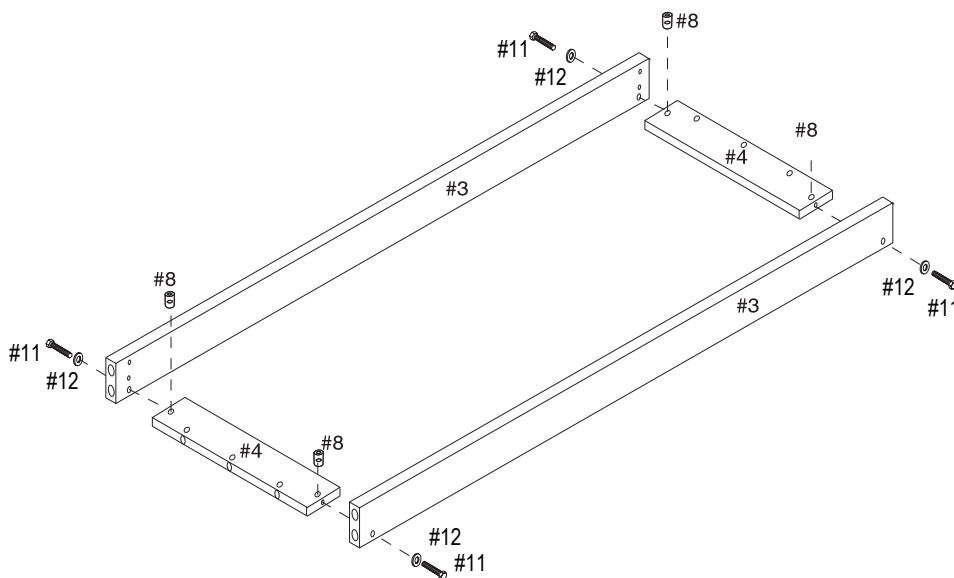

STEP 4 - SECURE THE BASE TO THE PEDESTALS

 1. Insert barrel nuts (#8) into the seven holes in the base.
2. Start the four 3" hex head bolts (#10) with 1/4" washers (#12) through the ends of the pedestal and into the side rails. Finger tighten.
3. Start the three 2" hex head bolts (#11) with 1/4" washers (#12) through the center of the pedestal and into the end rails. Finger tighten.
4. Tighten all bolts using wrench (#24).

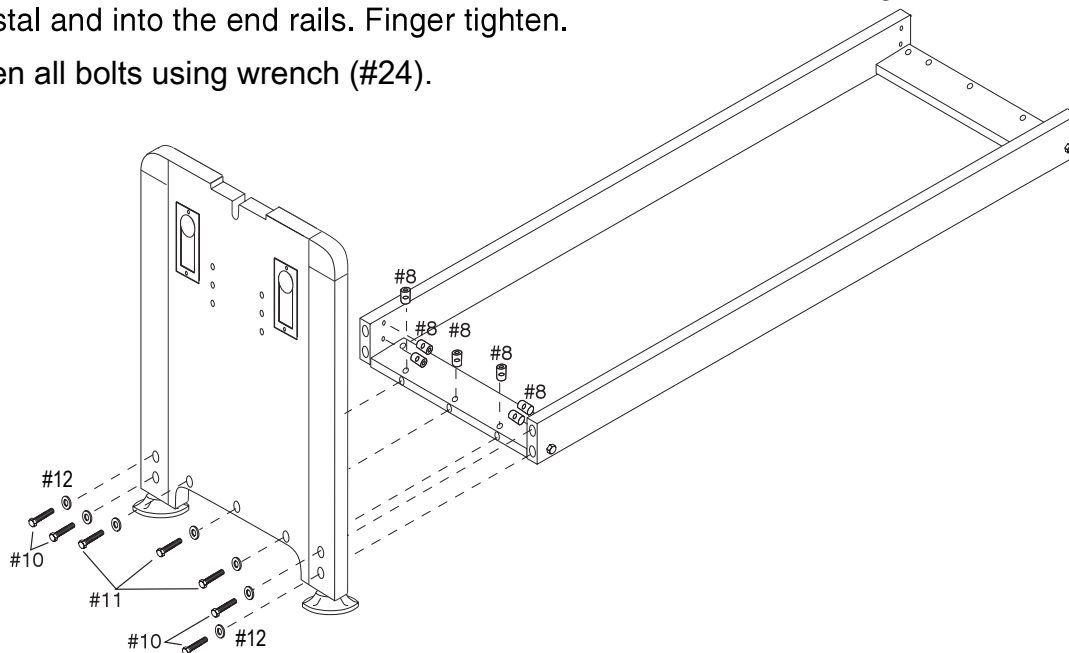

STEP 5 - ATTACH THE TABLE TOP

 
NOTE: The end of the table top with the power cord has the three 3/4" washers (#14) and two 3/4" hex nuts (#15) pre assembled on the power cord.

It is possible that the support axle bolts are not pushed out completely. To pull them out, thread a nut onto the end and pull with pliers. If the bolt does not pull out freely tap it with a hammer to break it loose then pull.

1. Place one 3/4" washer (#14) over the support axle. Thread the 3/4" hex nut (#15) onto the axle followed by another washer (#14).
2. Lift the table top into position over the side supports.
3. Lower the table top so the supporting axles drop into the slots in the pedestals.


NOTE: The two washers and the nut should be to the inside of the pedestals.

4. Place another washer #14 and thread a nut #15 onto the support axle.
5. Release the table locks. Tighten the nuts on the support axle to provide smooth table top rotation.

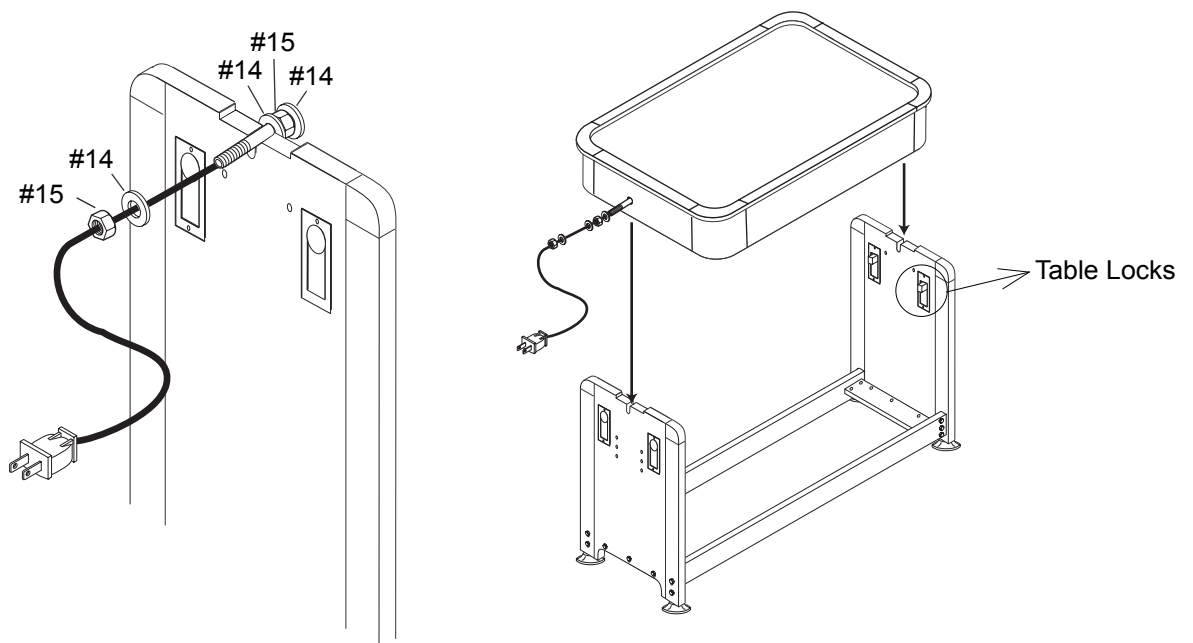

Step 6. Attach the puck catchers and accessory Holder.

 - Align the puck catcher (#6) with the predrilled holes on each end of the playing table. Secure to pedestal with round head screws (#13). Run the power cord through the puck catcher.
- Align the accessory holder (#26) with the pedrilled holes on each end of the playing table. Secure to pedestal with screws (#13).
- Attach both Slide Scorers (#31) to the edges of the Hockey Cabinet using four Screws (#32).

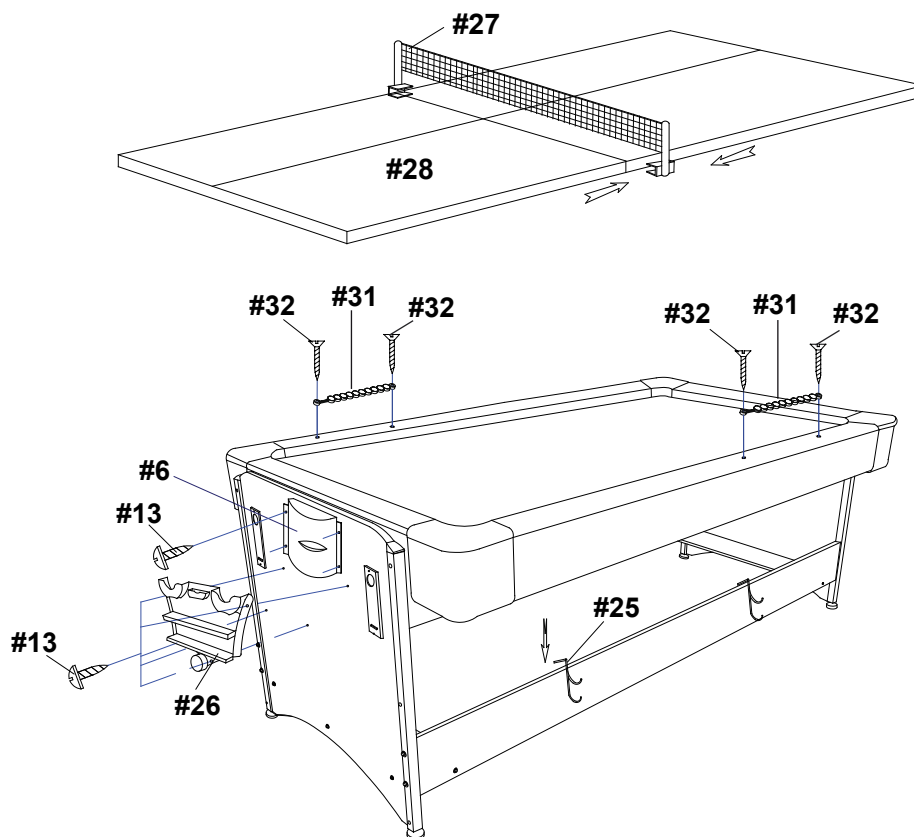


Step 7. Adjust levelers.

- With the help of another person, turn each leg leveler until the table rests level to the floor.
- Check with a carpenters level placed cross-wise and length-wise on the table top.
- Readjust levelers as necessary.

Step 8. Assemble goalies.

 - Remove backing from felt pads (#9) and place on bottom of goalies (#7).

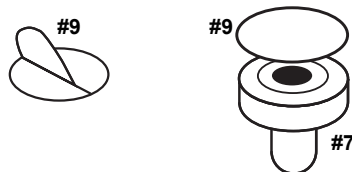

The assembly is complete.

To Rotate the Table:

CAUTION: This should be performed by an adult. The rotating table may pinch body parts.

 
- Pull out two table locks on one end.
- On the other end, pull out the two table locks.
- Slowly rotate the table.
- Push in the table locks.

To Level the Table:

- Place a carpenters level on the table.
- Screw leg levelers in or out until table is level.

Trouble Shooting:

If the pool table side is not level first try to level by using the leg levelers on each leg. Most of the time the table can be easily leveled using this method. If the table surface still needs adjustments shims may be used on the cross supports to bring up the low spots. See example below:

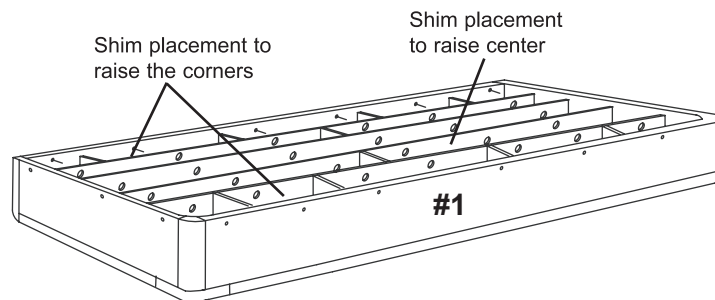**If the fan does not go on:**

- Unplug from electrical outlet.
- Inspect wiring for proper connection.
- Plug in to test.

If the fan works but the table has dead spots:

- Use a small drill bit and clear the holes by hand. DO NOT use and electric drill. Manually push the drill bit into the holes to clear.

Clean the surface by spraying a ray (do not spray directly onto the surface) with a furniture polish (like pledge) and buffing the surface of the table and also buffing the puck. This will provide a bit more "float" which may alleviate getting hung up in the "dead" areas.

Care and Use of your Table

- This product is intended for INDOOR use only.
- DO NOT sit, climb, or lean on the table.
- DO NOT drag the table when moving it. This will damage the legs.
- Keep your table covered. The playing surface can be brushed to keep clean.
- To clean the hard surfaces spray a cloth with a mild cleaner and wipe.
- Pucks that fly off the table may have chipped edges. Inspect the puck and replace if needed.

90-DAY LIMITED WARRANTY

The Manufacturer warrants to the original retail purchaser that this product is free from defects in material and workmanship under normal use and conditions for a period of ninety (90) days from the date of original purchase. The Manufacturer's liability is limited to the repair or replacement, at its option, of any defective product and shall not include any liability for indirect, incidental or consequential damages of any kind.

Should this product become defective due to material or workmanship within the warranty period, contact our Customer Service Department. This warranty is not transferable and does not cover normal wear and tear or damage caused by improper usage, negligence, misuse, abuse, transportation damage, acts of nature, or accident (including failure to follow the instructions in this manual). It does not cover expendable items such as batteries, light bulbs, fuses, accessories, cosmetic parts and other items that wear out due to normal usage, including felt covered areas of the playing surface. This warranty is also void if the product is disassembled and reassembled, damaged, modified from its original state, or used for other than indoor personal residential use (no commercial or rental applications).

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

IF YOU HAVE A WARRANTY CLAIM, CALL US FIRST (8 - 5 CST)

Please have your receipt and item number (found on the front cover) when you call.

GLD Products

S84 W19093 Enterprise Drive

Muskego, WI 53150 USA

1-800-225-7593

Fax: 1-800-841-6944

Email: gld@gldmfg.com

Web: www.gldproducts.com

Web: www.GLDProducts.com

If you are instructed to return the product for service, you are responsible for shipping the unit at your expense to the above address in packaging that will protect against further damage. All warranty or repair requests require a Return Authorization Number prior to returning the item.

PRODUCT REGISTRATION

Important: The product registration form on page 14 must be completed and returned along with a copy of your receipt within 10 days of purchase to validate your warranty.

REGISTER YOUR PRODUCT

Place postage here

Complete this form, include a copy of your receipt, fold, tape (do not staple) and return within 10 days of purchase. This protects your warranty and will help us develop new products!

Cut here.

GLD Products
 Warranty Department
 S84 W19093 Enterprise Drive
 Muskego, WI 53150 USA

Fold here second.



www.gldproducts.com

- | | |
|-----------------------|----------------------------|
| GAME TABLES | HOME CASINO |
| GAMES AND ACCESSORIES | BILLIARD CUES |
| BILLIARD ACCESSORIES | DARTBOARDS |
| SOFT-TIP DARTS | STEEL-TIP DARTS |
| FLIGHTS AND SHAFTS | DART CASES AND ACCESSORIES |

Fold here first.

Name		Date of Purchase	
Address		Phone-Day	
City		Phone-Evening	
State	Zip	Email	
Purchase Price:		Item: 64-1046 Game Table	
Store Name:			

1. What are the top two reasons that influenced the purchase of this product? Select two.

- | | | | |
|--------------------------|-------------------------|--------------------------|-------------------------------------------|
| <input type="checkbox"/> | Brand reputation | <input type="checkbox"/> | Prior experience with another GLD product |
| <input type="checkbox"/> | Saw in an advertisement | <input type="checkbox"/> | Color/appearance |
| <input type="checkbox"/> | Quality/durability | <input type="checkbox"/> | Other |
| <input type="checkbox"/> | Value for price | | |

2. How did you become aware of this product? Select two.

<input type="checkbox"/>	Saw in an advertisement	<input type="checkbox"/>	Saw it in the store
<input type="checkbox"/>	Saw or used a friend's or relative's	<input type="checkbox"/>	Recommended by another person
<input type="checkbox"/>	Received as a gift	<input type="checkbox"/>	Other

3. Rate your satisfaction with each of the following?

	Excellent	Good	Fair	Poor
Assembly instructions				
Ease of assembly				
Packaging				
Overall product satisfaction				

4. Were there any parts missing?

Yes No If so, which ones? Order No. _____

5. Based on your experience, would you buy another GLD product?

Yes No

6. Is this the first GLD product that you've owned? If No, what other product have you owned?:

Yes No _____

7. Have you owned products from:

Sportcraft Harvard Classic Sport Other

8. When did you decide to purchase this product?

Before entering the store. While in the store/impulse purchase

9. How many times per month will you use it?

1 to 3 4 to 8 9 to 15 16 +

10. Are you the intended user of this product?

Yes No, indicate who: _____

11. Where will you use this product?

Home Other: _____

12. Please tell us your gender?

Male Female

13. And your marital status?

Married Single

14. Age?

Under 25 25 - 40 40 - 60 Over 60

15. Which best describes your family income?

<input type="checkbox"/>	Under \$25,000	<input type="checkbox"/>	\$25,000 - \$49,999	<input type="checkbox"/>	\$50,000 - \$99,999
<input type="checkbox"/>	\$100,000 - 149,999	<input type="checkbox"/>	\$150,000 - \$199,999	<input type="checkbox"/>	Over \$200,000

16. Education:

<input type="checkbox"/>	Some high school	<input type="checkbox"/>	College degree
<input type="checkbox"/>	Completed high school	<input type="checkbox"/>	Graduate degree

Remember to attach a copy of your receipt.

Parts Re-Order Form

Traditional Pockey® Table, Models 64-1046

Part #	Description	Unit Price US\$	Qty.	Total Amount	Part #	Description	Unit Price US\$	Qty.	Total Amount
2-200	Table Top	300.00ea.			2-22	Brush	8.00ea.		
2-201	Pedestal	50.00ea.			2-23	Cue Stick	12.00ea.		
2-6	Side Rail	25.00ea.			2-24	Chalk	2.00ea.		
2-8	End Rail	25.00ea.			2-25	Open End Wrench	1.00ea.		
2-9	Table Lock	10.00ea.			2-26	Leg Leveler	10.00ea.		
2-202	Puck Catcher	10.00ea.			2-27	Triangle	6.00ea.		
2-203	Allen Key Bolt 3/16"*1"Lg	.25ea.			1-17	Box Wrench	1.00ea.		
2-12	1/4" Barrel Nut	.25ea.			2-204	Cue Rack	5.00ea.		
2-13	Hex Head Bolt 1/4"*2" Lg	2.00ea.			2-205	Puck Holder	10.00ea.		
2-14	Hex Head Bolt 1/4"*3" Lg	2.00ea.			2-31	1/2" Phillips Head Screw	.20ea.		
2-15	1/4" Washer	.25ea.			2-52	Table Tennis Top	120.00ea.		
2-16	3/4" Washer	.20ea.			8-5	Table Tennis Bat	6.00ea.		
2-17	3/4" Hex Nut	.20ea.			8-10	Table Tennis Net with posts	19.00ea.		
2-18	Goalie	6.00ea.			8-4	Table Tennis Ball	1.00ea.		
2-19	Felt Pad	1.00ea.			2-116	Allen Key	1.00ea.		
2-20	Puck	1.50ea.			2-206	W/P4*1-1/4" Screw	.20ea.		
2-21	Billiard Balls	30.00ea.			2-207	Corner	10.00ea.		

Subtotal	
S/H	
Tax*	
Total	

Shipping will be added automatically.
 If you are paying by check or money order, please call for shipping charges.
 5.1%(Waukesha, WI) sales tax will apply (subject to change).

Mail To:

GLD Products

S84 W19093 Enterprise Drive
 Muskego, WI 53150 USA

800-225-7593 • FAX 800-841-6944

Email: gld@gldmfg.com

Website: www.gldproducts.com

Method of Payment

_____ Check or Money Order

_____ Credit Card

_____ Visa _____ MasterCard _____ Discover _____ American Express

Card # _____

Security Code # _____ Billing Address Zipcode _____

Signature _____ Exp. Date _____

Shipping Address

Name _____

Address _____ Phone _____

City _____ State _____ Zip _____



www.gldproducts.com

GAME TABLES

HOME CASINO

GAMES AND ACCESSORIES

BILLIARD CUES

BILLIARD ACCESSORIES

DARTBOARDS

SOFT-TIP DARTS

STEEL-TIP DARTS

FLIGHTS AND SHAFTS

DART CASES AND ACCESSORIES



PROUD MANUFACTURER OF



S84 W19093 Enterprise Drive • Muskego, WI 53150 USA
262.679.8730 or 1.800.225.7593 tele
262.679.8738 or 1.800.841.6944 fax
262.679.8739 international fax
Email: gld@gldmfg.com
www.gldproducts.com